

User's Manual For MBD 8072 AC High Performance Microstepping Driver



MBD 8072 AC

Otime Tecnologia Industrial Ltda.

Microstepping Driver Manual

www.otime.com.br

V 1.0

pág 1 de 14

1.0 Table of Contents

1	
1.0 Table of Contents	2
2.0 Introduction, Features and Applications.....	3
3.0 Specifications	3
4.0 Pin Assignment and Description.....	5
5.0 Control Signal Connector (P1) Interface	6
6.0 Connecting the Motor.....	7
7.0 Power Supply Selection	8
8.0 Selecting Microstep Resolution and Driver Output Current	9
9.0 Wiring Notes.....	11
10.0 Typical Connection	11
11.0 Sequence Chart of Control Signals	13
12.0 Protection Functions	13
13.0 Frequently Asked Questions	14

2.0 Introduction, Features and Applications

Introduction

The **MBD 8072 AC** is a high performance microstepping driver using pure-sinusoidal current control technology. Owing to the above technology and the self adjustment technology (self adjust current control parameters) according different motors, the driven motors can run with smaller noise, lower heating, smoother movement and have better performances at higher speed than most of drivers in the markets. It is suitable for driving 2 phase and 4 phase hybrid stepping motors.

Features

- Pure-sinusoidal precise current control technology
- Extremely low motor noise
- Both driver and motor are low heating
- High performance, low cost
- Supply voltage up to +100VDC or 80 VAC
- Peak current up to 7,2A
- Optically isolated differential inputs
- Pulse frequency up to 300 KHz
- Automatic idle-current reduction
- 16 selectable resolutions (in decimal and binary up to 51.200 steps/rev)
- Suitable for 2-phase and 4-phase motors
- DIP switch current setting with 8 different values
- Over-voltage and short-circuit protection
- CW/CCW and PUL/DIR mode selectable
- Self adjustment technology

Applications

Suitable for a wide range of stepping motors from NEMA size 17 to 43. It can be used in various kinds of machines, such as carving machines, laser cutters, laser phototypesetting systems, plotting instruments, NC machines, pick-place devices, and etc. It is specially adapted to extremely low noise, low vibration and high precision equipments.

3.0 Specifications

Electrical Specifications

Parameters (Tj = 25°C)	Min	Typical	Max	Unit
Output current	1.8	-	7,2 (5.1 RMS)	A
Supply voltage (DC)	24	75	100	VDC
Supply voltage (AC)	18	55	80	VAC
Logic signal current	7	10	16	mA
Pulse input frequency	0	-	300	KHz
Isolation resistance	500			MΩ

Operating Environment and Other Specifications

Cooling	Natural Cooling or Forced cooling	
Output current	Environment	Avoid dust, oil fog and corrosive gases
Operating Environment	Ambient Temperature	0°C - +50°C
	Humidity	40% RH – 90% RH
	Operating Temperature	70 °C Max
	Vibration	5.9 m/s² Max
Storage Temperature	-20°C - +65°C	
Weight	Approx. 0.580 Kg	

Mechanical Specifications

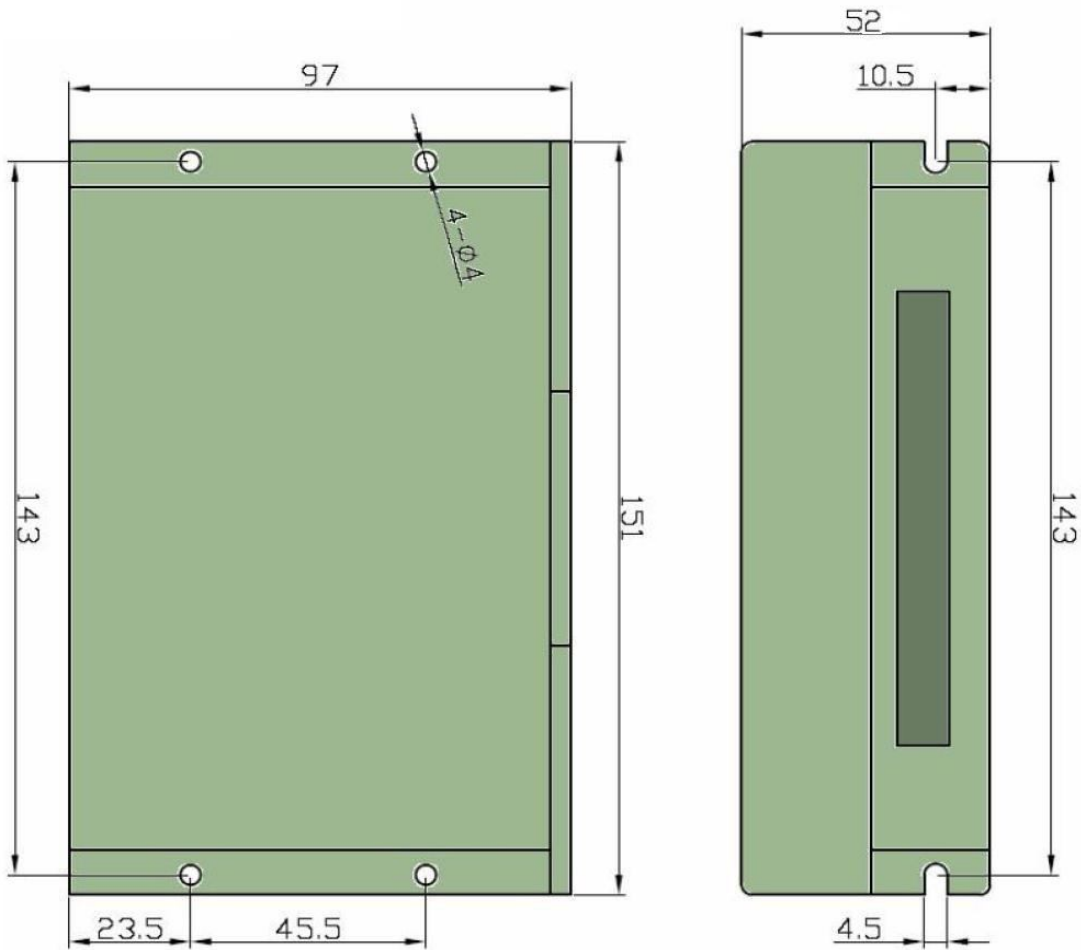


Figure 1: Mechanical specifications(unit: mm, 1 inch = 25.4 mm)
Recommended to use side mounting for better heat dissipation

Elimination of Heat

Driver’s reliable working temperature should be <65°C, motor working temperature should be <80°C;
Recommend use automatic idle-current reduction mode, namely current automatically be reduced to 60% when motor stops, so as to decrease driver heating and motor heating;
Recommend use side mounting to maximize heatsink area.

4.0 Pin Assingment and Description

The MBD 8072 AC has two connectors, connector P1 for control signals connections, and connector P2 for power and motor connections. The following tables are brief descriptions of the two connectors of the MBD 8072 AC. More detailed descriptions of the pins and related issues are presented in section 4, 5, 9.


Connector P1 Configurations

Pin Function	Details
PUL+(+5V)	Pulse signal: In single pulse (pulse/direction) mode, this input represents pulse signal, effective for each rising or falling edge (set by inside jumper J1); 4-5V when PUL-HIGH, 0-0.5V when PUL-LOW. In double pulse mode (pulse/pulse) , this input represents clockwise (CW) pulseeffective for high level or low level (set by inside jumper J1). For reliable response, pulse width should be longer than 2.5s. Series connect resistors for current-limiting when +12V or +24V used.
PUL-(PUL)	
DIR+(+5V)	DIR signal: In single-pulse mode, this signal has low/high voltage levels, representing two directions of motor rotation; in double-pulse mode (set by inside R31&R32), this signal is counter-clock (CCW) pulse□effective for high level or low level (set by inside R13&R14). For reliable motion response, DIR signal should be ahead of PUL signal by 5μs at least. 4-5V when DIR-HIGH, 0-0.5V when DIR-LOW. Please note that motion direction is also related to motor-driver wiring match. Exchanging the connection of two wires for a coil to the driver will reverse motion direction.
DIR-(DIR)	
ENA+(+5V)	Enable signal: This signal is used for enabling/disabling the driver. High level for enabling the driver and low level for disabling the driver. Usually left unconnected (enabled).
ENA+(ENA)	

Selecting Effective Pulse Edge or Effective Level and Control Signal Mode.

There are two jumpers J1 and J3 inside the **MBD 8072 AC** specifically for selecting active pulse edge or effective level and control signal mode, as shown in figure 2. Default setting is PUL/DIR mode and upward-rising edge effective.

Figure 2: J1 and J3 jumpers,

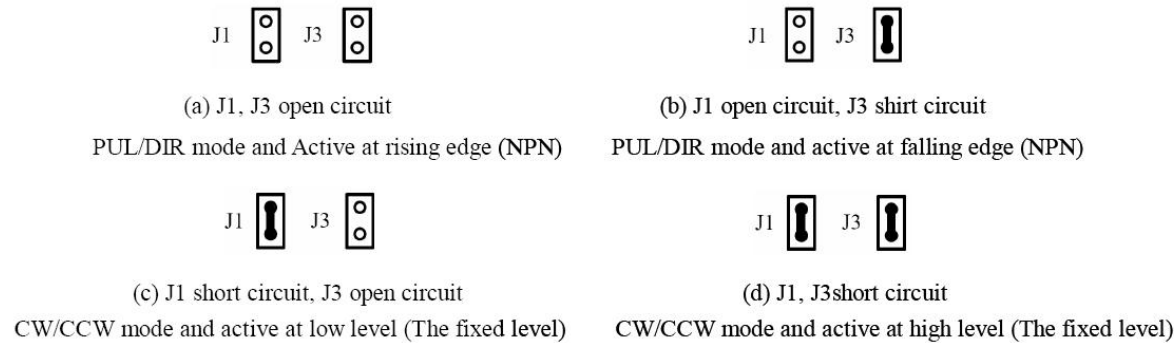

Connector P2 Configurations

Pin Function	Details
Gnd / VAC	DC power ground / VAC
+ V / VAC	DC / AC power supply inputs. 24 ~ 100VDC, 18 ~80 VAC Including voltage fluctuation and EMF voltage.
A+, A-	Motor phase A
B+, B-	Motor phase B

5.0 Control Signal Connector (P1) Interface

The **MBD 8072 AC** can accept differential and single-ended input signals (including open-collector and PNP output). The **MBD 8072 AC** has 3 optically isolated logic inputs which are located on connector P1 to accept line driver control signals. These inputs are isolated to minimize or eliminate electrical noises coupled onto the drive control signals. Recommend use line driver control signals to increase noise immunity of the driver in interference environments. In the following figures, connections to open-collector and PNP signals are illustrated.

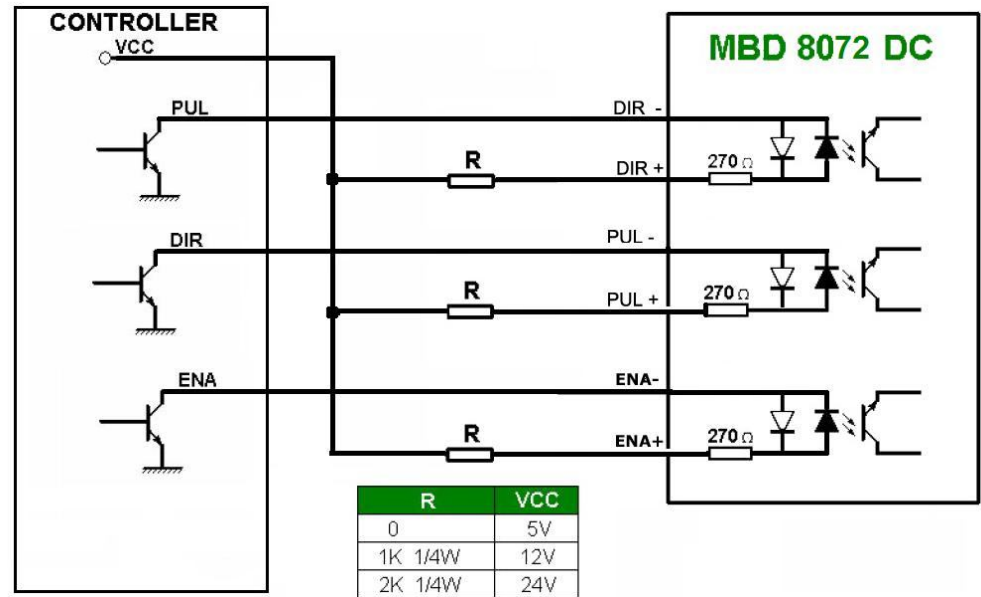


Figure 3: Connections to open-collector signal (common-anode)

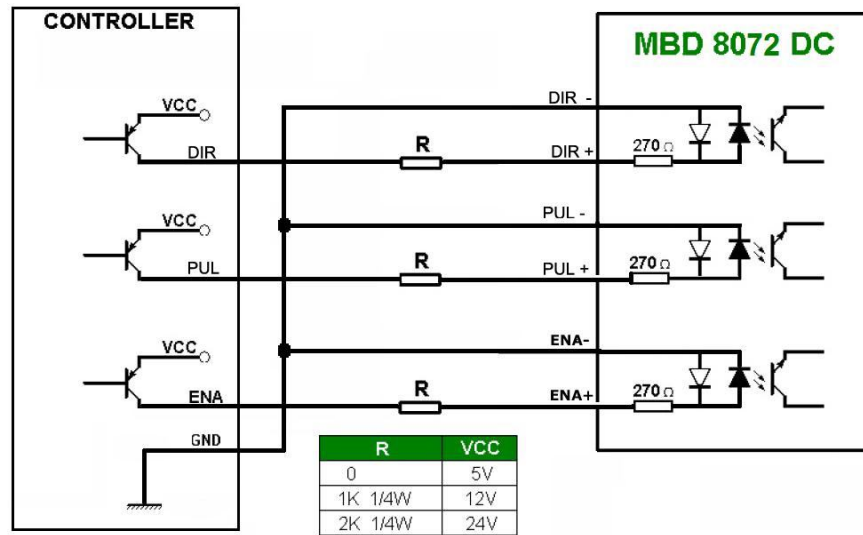


Figure 4: Connection to PNP signal (common-cathode)

6.0 Connecting the Motor

The **MBD 8072 AC** can drive 2-phase and 4-phase hybrid stepping motors.

Connections to 4-lead Motors

4 lead motors are the least flexible but easiest to wire. Speed and torque will depend on winding inductance. In setting the driver output current, multiply the specified phase current by 1.4 to determine the peak output current.

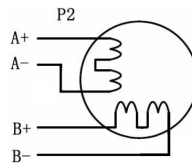


Figure 5: 4-lead Motor Connections

Connections to 6-lead Motors

Like 8 lead stepping motors, 6 lead motors have two configurations available for high speed or high torque operation. The higher speed configuration, or half coil, is so described because it uses one half of the motor's inductor windings. The higher torque configuration, or full coil, uses the full windings of the phases.

Half Coil Configurations

As previously stated, the half coil configuration uses 50% of the motor phase windings. This gives lower inductance, hence, lower torque output. Like the parallel connection of 8 lead motor, the torque output will be more stable at higher speeds. This configuration is also referred to as half chopper. In setting the driver output current multiply the specified per phase (or unipolar) current rating by 1.4 to determine the peak output current

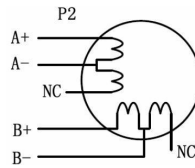


Figure 6: 6-lead motor half coil (higher speed) connections

Full Coil Configurations

The full coil configuration on a six lead motor should be used in applications where higher torque at lower speeds is desired. This configuration is also referred to as full copper. In full coil mode, the motors should be run at only 70% of their rated current to prevent over heating.

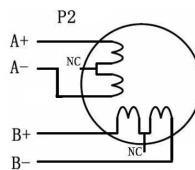


Figure 7: 6-lead motor full coil (higher torque) connections

Connections to 8-lead Motors

8 lead motors offer a high degree of flexibility to the system designer in that they may be connected in series or parallel, thus satisfying a wide range of applications.

Series Connections

A series motor configuration would typically be used in applications where a higher torque at lower speeds is required. Because this configuration has the most inductance, the performance will start to degrade at higher speeds. In series mode, the motors should also be run at only 70% of their rated current to prevent over heating.

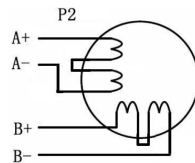


Figure 8: 8-lead motor series connections

Parallel Connections

An 8 lead motor in a parallel configuration offers a more stable, but lower torque at lower speeds. But because of the lower inductance, there will be higher torque at higher speeds. Multiply the per phase (or unipolar) current rating by 1.96, or the bipolar current rating by 1.4, to determine the peak output current.

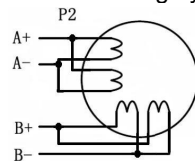


Figure 9: 8-lead motor parallel connections

7.0 Power Supply Selection

The **MBD 8072 AC** can match large and small size stepping motors (from NEMA size 17 to 43). To achieve good driving performances, it is important to select supply voltage and output current properly. Generally speaking, supply voltage determines the high speed performance of the motor, while output current determines the output torque of the driven motor (particularly at lower speed). Higher supply voltage will allow higher motor speed to be achieved, at the price of more noise and heating. If the motion speed requirement is low, it's better to use lower supply voltage to decrease noise, heating and improve reliability.

Regulated or Unregulated Power Supply

Both regulated and unregulated power supplies can be used to supply the driver. However, unregulated power supplies are preferred due to their ability to withstand current surge. If regulated power supplies (such as most switching supplies.) are indeed used, it is important to have large current output rating to avoid problems like current clamp, for example using 4A supply for 3A motor-driver operation. On the other hand, if unregulated supply is used, one may use a power supply of lower current rating than that of motor (typically 50% ~ 70% of motor current). The reason is that the driver draws current from the power supply capacitor of the unregulated supply only during the ON duration of the PWM cycle, but not during the OFF duration. Therefore, the average current withdrawn from power supply is considerably less than motor current. For example, two 3A motors can be well supplied by one power supply of 4A rating.

Multiple Drivers

It is recommended to have multiple drivers to share one power supply to reduce cost, if the supply has enough capacity. To avoid cross interference, DO NOT daisy-chain the power supply input pins of the drivers. (Instead, please connect them to power supply separately.)

Attention:


NEVER connect power and ground in the wrong direction, as it will damage the **MBD 8072 AC**.

Selecting Supply Voltage

The power MOSFETS inside the **MBD 8072 AC** can actually operate within +24V ~ +100VDC or 18 ~ 80VAC, including power input fluctuation and back EMF voltage generated by motor coils during motor shaft deceleration. Higher supply voltage can increase motor torque at higher speeds, thus helpful for avoiding losing steps. However, higher voltage may cause bigger motor vibration at lower speed, and it may also cause over-voltage protection or even driver damage. Therefore, it is suggested to choose only sufficiently high supply voltage for intended applications, and it is suggested to use power supplies with theoretical output voltage of +24 ~ +75VDC OR 18 ~ 55VAC, leaving room for power fluctuation and back-EMF.

8.0 Selecting Microstep Resolution and Driver Output Current

This **MBD 8072 AC** uses an 8-bit DIP switch to set microstep resolution, and motor operating current, as shown below::

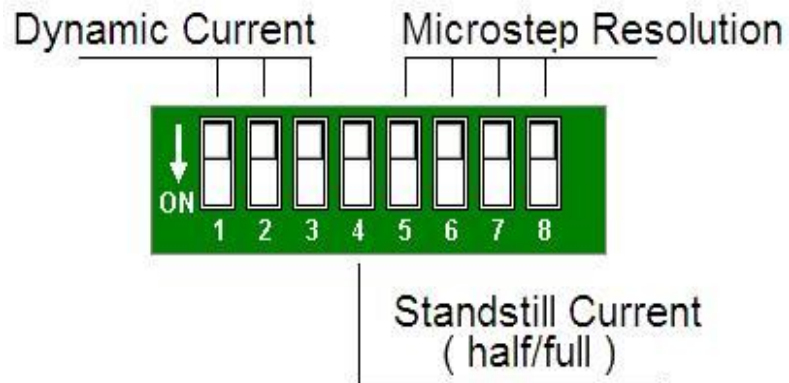

Microstep Resolution Selection

Microstep resolution is set by SW5, 6, 7, 8 of the DIP switch as shown in the following table:

Step/rev (for 1.8° motor)	SW5	SW6	SW7	SW8
400	ON	ON	ON	ON
800	OFF	ON	ON	ON
1600	ON	OFF	ON	ON
3200	OFF	OFF	ON	ON
6400	ON	ON	OFF	ON
12800	OFF	ON	OFF	ON
25600	ON	OFF	OFF	ON
51200	OFF	OFF	OFF	ON
1000	ON	ON	ON	OFF
2000	OFF	ON	ON	OFF
4000	ON	OFF	ON	OFF
5000	OFF	OFF	ON	OFF
8000	ON	ON	OFF	OFF
10000	OFF	ON	OFF	OFF
20000	ON	OFF	OFF	OFF
40000	OFF	OFF	OFF	OFF

For a given motor, higher driver current will make the motor to output more torque, but at the same time causes more heating in the motor and driver. Therefore, output current is generally set to be such that the motor will not overheat for long time operation. Since parallel and serial connections of motor coils will significantly change resulting inductance and resistance, it is therefore important to set driver output current depending on motor phase current, motor leads and connection methods.

Phase current rating supplied by motor manufacturer is important in selecting driver current, however the selection also depends on leads and connections.

The first three bits (SW1, 2, 3) of the DIP switch are used to set the dynamic current. Select a setting closest to your motor's required current..

Dynamic Current Setting

Peak current (A)	RMS (A)	SW1	SW2	SW3
2,4	1,7	ON	ON	ON
3,1	2,2	OFF	ON	ON
3,8	2,7	ON	OFF	ON
4,5	3,2	OFF	OFF	ON
5,1	3,6	ON	ON	OFF
5,8	4,1	OFF	ON	OFF
6,5	4,6	ON	OFF	OFF
7,2	5,1	OFF	OFF	OFF

Notes: Due to motor inductance, the actual current in the coil may be smaller than the dynamic current setting, particularly under high speed condition.

Standstill Current Setting

SW4 is used for this purpose. OFF meaning that the standstill current is set to be half of the selected dynamic current, and ON meaning that standstill current is set to be the same as the selected dynamic current.

The current automatically be reduced to 60% of the selected dynamic current setting 1 second after the last pulse. Theoretically, this will reduce motor heating to 36% (due to $P=I^2 \times R$) of the original value. If the application needs a different standstill current, please contact us.

9.0 Wiring Notes

In order to improve anti-interference performance of the driver, it is recommended to use twisted pair shield cable.

To prevent noise incurred in pulse/dir signal, pulse/direction signal wires and motor wires should not be tied up together. It is better to separate them by at least 10 cm, otherwise the disturbing signals generated by motor will easily disturb pulse direction signals, causing motor position error, system instability and other failures.

If a power supply serves several drivers, separately connecting the drivers is recommended instead of daisy-chaining.

It is prohibited to pull and plug connector P2 while the driver is powered ON, because there is high current flowing through motor coils (even when motor is at standstill). Pulling or plugging connector P2 with power on will cause extremely high back-EMF voltage surge, which may damage the driver.

10.0 Typical Connection

A complete stepping system should include stepping motor, stepping driver, power supply and controller (pulse generator). A typical connection is shown as figure 10.

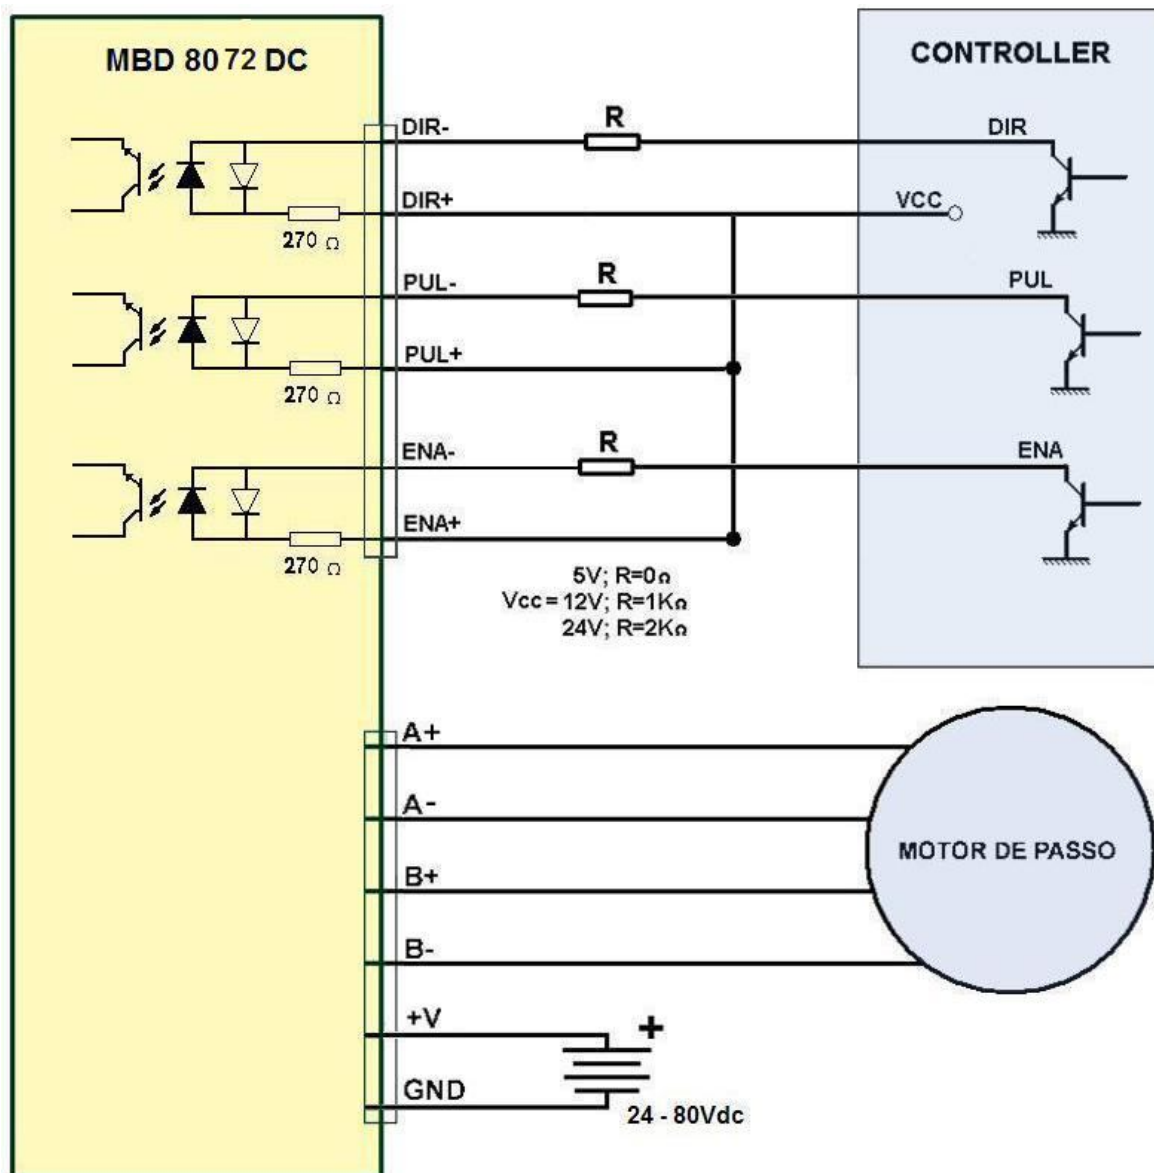


Figure 10: Typical connection

11.0 Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA signals must abide by some rules, shown as following diagram (assuming J1 default setting is upward-rising edge effective):

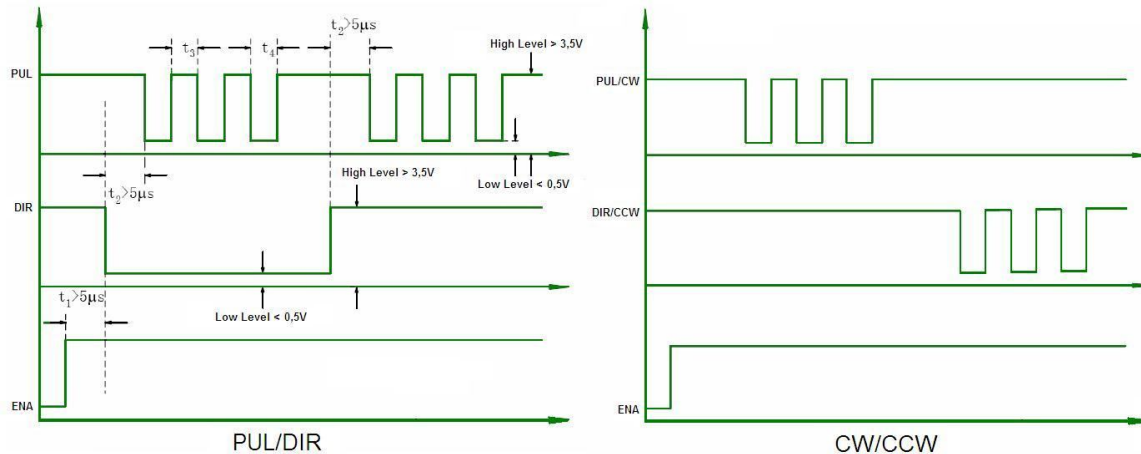


Figure 11: Sequence chart of control signals

Remark:

t1: ENA must be ahead of DIR by at least 5 μ s, logic HIGH as effective. Generally ENA+ and ENA- is NC (not connected).

t2: DIR must be ahead of PUL effective edge by at least 5 μ s to ensure correct direction;

t3: Pulse width not less than 1.5 μ s;

t4: Low level width not less than 1.5 μ s.

12.0 Protection Functions

To improve reliability, the driver incorporates some built-in protection features.

Short-voltage and Over-voltage protection

When power supply voltage is lower than +18VDC, over-voltage protection will be activated and power indicator LED will turn off. When power supply voltage exceeds +94VDC, over-voltage protection will be activated and the Alarm indicator LED will turn on.

Over-current Protection

Protection will be activated when continuous current reaches to 16A.

Short Circuit Protection

Protection will be activated in case of short circuit between motor coils or between motor coil and ground.

13.0 Frequently Asked Questions

In the event that your **MBD 8072 AC** doesn't operate properly, the first step is to identify whether the problem is electrical or mechanical in nature. The next step is to isolate the system component that is causing the problem. As part of this process you may have to disconnect the individual components that make up your system and verify that they operate independently. It is important to document each step in the troubleshooting process. You may need this documentation to refer back to at a later date, and these details will greatly assist our Technical Support staff in determining the problem should you need assistance.

Many of the problems that affect motion control systems can be traced to electrical noise, controller software errors, or mistake in wiring.

Problem Symptoms and Possible Causes

Symptoms	Possible Problems
Motor is not rotating	No power
	Microstep resolution setting is wrong
	DIP switch current setting is wrong
	Fault condition exists
	The driver is disabled
Motor rotates in the wrong direction	Motor phases may be connected in reverse
The driver in fault	DIP switch current setting is wrong
	Something wrong with motor coil
Erratic motor motion	Control signal is too weak
	Control signal is interfered
	Wrong motor connection
	Something wrong with motor coil
	Current setting is too small, losing steps
Motor stalls during acceleration	Current setting is too small
	Motor is undersized for the application
	Acceleration is set too high
	Power supply voltage too low
Excessive motor and driver heating	Inadequate heat sinking / cooling
	Automatic current reduction function not being utilized
	Current is set too high