



CW230 2-Phase Microstepping Motor Driver

Characteristics:

- 1.DC power input type 24V~36V
- 2.Output current: 0.9~3A
- 3.Microstep: 1(1.80)、1/2、1/4、1/8、1/16、1/32、1/64
- 4.Protect form : Overheated protect, lock automatic half current ,error connect protect
- 5.Dimension: 115mmj 72mmj 32mm
- 6.Weight: <300g.
- 7.Working environment: Temperature-15~40℃ Humidity<90%.
- 8.


I/O Ports:

- 1、VCC+: DC power positive pole

Note: Must guard against exceeding 40V,
so as not to damage the module

- 2、GND: DC power cathode
- 3、A+、A-: Stepping motor one winding
- 4、B+、B-: Stepping motor other winding
- 5、CP+、CP-: Stepping pulse input +5V (Rising edge effective ,
rising edge duration >10 μ S)
- 6、CW+、CW-: Stepping motor direction input, voltage level
touched off, high towards, low reverse
- 7、REST+、REST-: motor free

**The interface see
the right picture**

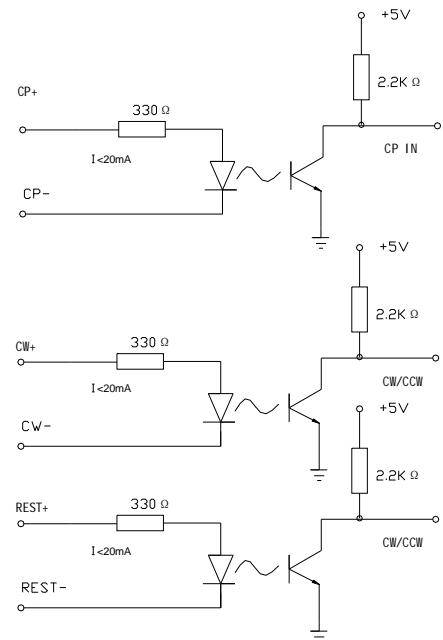

NOTE:

- 1, When ambient temperature is high or working current over 2A, fix the module on big metal shell ,
or use axle flows fan dispels the heat, to make the module run reliably for a long time.
- 2, Half current automatically: if control machine not send out signal in half second, driver enter
half current state of automatically for electricity saving, the phase current of the winding
of the electric
- 3, The fault phase is protected : When the double-phase electrical machinery is connected with driver ,
users are apt to connect the phase by mistake, thus would damage the driver seriously. The
protecting circuit is within this driver, when users connect by mistake, the driver will not
be damaged, but the electrical machinery runs abnormally, shake , and output is small . Please
check whether the wiring of electrical machinery is a mistake



CW230 2-Phase Microstepping Motor Driver

Switch Choice: (i ON=0, OFF=1)


1、Microstep choice

M1	1	0	1	0	1	0	1	0
M2	1	1	0	0	1	1	0	0
M3	1	1	1	1	0	0	0	0
Micro	1	1/2	1/4	1/8	1/16	1/32	1/64	—

2、Current choice:

M5	0	0	0	0	1	1	1	1
M6	0	0	1	1	0	0	1	1
M7	0	1	0	1	0	1	0	1
Current (A)	0.9	1.2	1.5	1.8	2.1	2.4	2.7	3

Dimension: (mm)

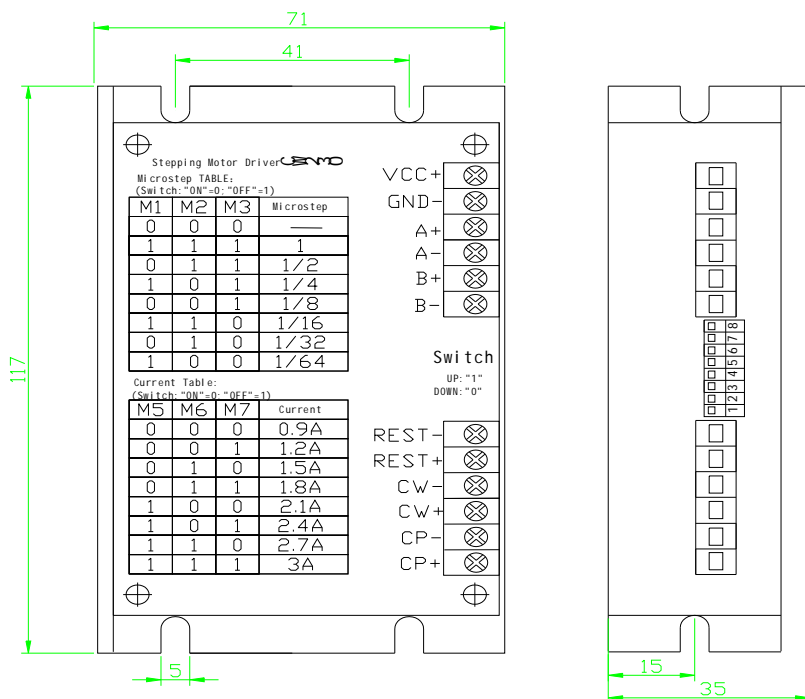



Changzhou Chuangwei Motor&Electric Appliance Co.,Ltd

CW230 2-Phase Microstepping Motor Driver

Photo for CW230



Address: hugang bridge, 312 national road, Qishuyan district, Changzhou city, Jiangsu Province, China. 213011

Tel: 0086-519-88776331, Fax: 0086-519-88372592,

www.cw-motor.com Email: cw@cw-motor.com, annie.motor@yahoo.com